



How to fit acrylic Photo & Picture Frames using our StandOff sign fittings

Tools required:

pencil, tape measure, spirit level, drill, screwdriver, screws/plugs depending on wall surface.

Your acrylic panel is pre-drilled. Use this as a template. Position image - use small squares of double-side tape.

Offer up your acrylic panel to the position you require using a tape measure and spirit level to align correctly.

Mark hole positions on wall with pencil using the acrylic panel as template. Mark the centre of each hole.

Depending on type of wall, use appropriate drill bit and drill centre mark. Use screw plugs if necessary.

Screw barrels of sign supports onto wall.

Offer up acrylic panel to sign support barrels and screw sign support heads on. Screw on loosely at first until all heads are fitted then tighten all heads to secure.

Please note: Our acrylic has a protective covering which must be removed.

DISPLAYS UK

Exhibition Stands • Large Format Graphics • Approved Perspex Fabricator